



USER MANUAL

	STANDARD PLUS	PREMIUM
UPRIGHT REFRIGERATORS	DM-92121	DM-92131
	DM-92122	DM-92132
	DM-92125	
	DM-92224	
UPRIGHT FREEZERS	DM-92127	DM-92137



ISO 9001:2000





**Information of special importance for the user's safety and a correct operation of equipment is marked with this sign.
Read this user manual carefully before operating the equipment.**

PROPER AND SAFETY OPERATION PRINCIPLES



In order to ensure operational safety and long trouble-free operation of the device, the following principles should be observed:

- **Acquaint the operating staff with basic regulations concerning the operation of electric equipment, rules of safe operation and first aid provision in case of emergency.**
- **Acquaint practically the operating staff with proper operation rules.**
- **It is forbidden to connect the device to the power supply system that is not previously checked with regard to the anti-shock protection installation correctness.**
- **It is forbidden to connect the device to the plug-in socket without a grounding pin.**
- **It is forbidden to wash, clean or carry out any repairs of the device connected to the power supply system.**
- **All repairs of the device can be carried out only by an authorized person, observing rules related to the replacement of damaged parts with identical ones.**
- **The producer does not assume responsibility for the use of the device contrary to its purpose or the recommendations of this user manual.**
- **Ensure a free airflow above the upright refrigerator or freezer. The minimum distance between the edge of the upright refrigerator or freezer and the ceiling of the room should be 400 mm.**
- **In order to ensure the correct operation of the device and to obtain the parameters specified by the producer of the upright refrigerator or freezer it is forbidden to cover the perforation in the side part of the control panel. The producer does not guarantee the correct operation of the device if the perforation is covered.**
- **The devices of the Standard Plus and Premium group may be operated only and exclusively in a ventilated room within the range of the ambient temperatures of +16 to +40°C and relative air humidity of up to 40%.**
- **In case of the operation of the devices in the ambient conditions exceeding the recommended ones the lowest declared operating temperature may not be achieved and the electricity consumption may be increased.**
- **The devices are not designed for the operation outside the buildings and they cannot be exposed to the direct effects of adverse weather conditions (snow, rain, sunlight).**
- **It is forbidden to store the devices in rooms where freezing temperatures may occur.**
- **After withdrawal of the device from service it should be disposed in an environmentally responsible manner. The valid local regulations related to disposal and scrapping works should be observed.**
- **It is forbidden to store explosive substances or as aerosol cans with combustible gas, e.g. propane, butane etc., in the device. It is forbidden to store electrical appliances.**
- **Please keep this user manual for future use or transfer to any subsequent user.**

TABLE OF CONTENTS

PROPER AND SAFETY OPERATION PRINCIPLES2

TABLE OF CONTENTS.....3

PURPOSE4

REFRIGERATED SYSTEM OPERATION4

INTERIOR TEMPERATURE SET-UP4

START-UP PREPARATION4

CONNECTION TO ELECTRIC SYSTEM5

OPERATION.....6

TRANSPORT7

DISPOSAL7

TECHNICAL DATA8

Table 1. Stainless steel upright refrigerators of DM-9212x and DM-9222x series.....8

Table 2. Stainless steel upright refrigerators of DM-9213x series.....8

Table 3. Upright freezers of DM-9212x and DM-9213x series.....9

WIRING DIAGRAM.....10

LAE CONTROLLER WITH BUTTONS - SERVICE INSTRUCTION.....14

LAE CONTROLLER WITH LCD DISPLAY AND MEMBRANE BUTTONS - SERVICE
INSTRUCTION.....15

RATING PLATE AND F-GAS LABEL16

PURPOSE

The devices produced by DORA METAL belong to a group of professional chilling and freezing equipment. They are intended for short-term storage of foodstuffs at work place. The devices can be used in restaurants, confectioners' shops, cafés, networks of stores in which it is necessary to display foodstuffs in a chilled or frozen state allowing maintaining their taste, smell and aesthetic values.

The temperature adjustment ranges for particular types of devices are specified in the technical data.

Note: The devices are not designed for the operation outside the buildings and they cannot be exposed to the direct effects of adverse weather conditions (snow, rain, sunlight).

The devices are not intended to store drugs, blood plasma, laboratory resources and other substances and products specified in the directive 2007/47/CE.

The producer does not assume responsibility for any improper use of the device, contrary to its purpose.

REFRIGERATED SYSTEM OPERATION

There is one-step, compressor's refrigerating cycle in the device. The refrigerated system is filled with an ecological refrigerating medium (depending on the model: R404a, R134a or R290 – data specified on the rating plate).

INTERIOR TEMPERATURE SET-UP

An electronic temperature controller sensor is located in the rear part of the chamber ceiling. The controller is programmed in such a manner that the device achieves an interior temperature specified in the technical data. For the method of the required temperature set-up – see page 14 or 15 (depending on the used controller).

START-UP PREPARATION. CLEANING AND MAINTENANCE

The first start-up and daily maintenance may be carried out by the operating personnel, provided that the below-mentioned recommendations are strictly observed. The producer shall not take responsibility for any operation carried out on the device without observing the recommendations specified in this user manual.



Disconnect the device from the power supply system before starting any maintenance works. The removal of any safety systems is forbidden.

Remove a protective foil before the first start-up. Wash external and internal surfaces with warm water with an addition of degreasing agent, used for washing kitchen utensils, with a soft cloth in accordance with a direction of the joint, never by circular movements. The protective foil should be removed slowly to avoid leaving remains of adhesive. If the adhesive is left, it can be removed by means of proper non-corrosive solvent – after this operation the surface should be washed out and dried.

In daily cleaning, use neutral soap, window cleaners or 90%-degradable liquid detergent (to minimize amounts of contaminants disposed to the surrounding environment) and a soft cloth, always in accordance with a direction of the joint, never by circular movements.



It is forbidden to use scouring agents, materials including steel wool that can scratch the surface and agents containing aggressive acids. Do not use a stream of water but only a damp cloth wipe while washing.

After washing, before connecting to the electric system, leave the device to dry completely.

When planning the location of the device there should be taken into account the space for free opening of the doors. The devices should be moved away from the wall to ensure free air circulation through the condenser. It is necessary to leave 40 cm of free space at least above the device and not less than 10 cm of free space on the sides and at the back which ensures a proper air circulation for the correct operation of the device.

Check if the floor is levelled where the device is to be located. Then, level the device, using adjusting feet, checking whether the door is closed well at the same time.

The device should be located away from heat sources, in a place not exposed to sunlight. The devices are not designed for the operation outside the buildings and they cannot be exposed to the direct effects of adverse weather conditions (snow, rain, sunlight).




In accordance with the EN378 standard it should be ensured that the room where the device with R290 medium is to be located has the proper volume. 1 m³ is required for 8 g of R290 refrigerant. The amount of R290 refrigerating medium is specified on the rating plate of the device.

CONNECTION TO ELECTRIC SYSTEM

The construction of the device is made according to the appropriate directives and harmonised standards:

- low voltage directive 2006/95/EC,
- electromagnetic compatibility directive 2004/108/EC,
- PN-EN 60335-2-89:2012, PN-EN 60335-1:2012 standards,
- PN-EN 55014-1:2012, PN-EN-55014-2:1999 standards,
- PN-EN 61000-3-2:2007, PN-EN 61000-3-3:2009 standards.

The device is adapted to be supplied from the 230V 50Hz line and should be supplied from a separate low voltage circuit. A grounded plug-in socket must be equipped with anti-shock protection selected, according to the requirements of local standards and regulations, in compliance with the parameters specified on the rating plate. The parameters of a residual current device should be selected according to the current value, specified on the rating plate. The devices are provided with a flexible power supply cable of HO5VV-F type (3x1,5mm², including protective conductor). The damaged power supply cable should be replaced by a specialist from technical service or by a skilled person with appropriate qualifications.

The devices are equipped with a terminal to connect external equipotential bonding, marked by a symbol . Before connecting the device the installation correctness and effectiveness of equipotential bonding operation should be checked in accordance with PN-IEC-60364-4-41.



The device can be started when effectiveness of anti-shock protection is confirmed by results of measurements carried out according to the regulations in force.

The device can be connected to the electric system when it is stated that the electric system fulfils the afore-mentioned requirements. The device is connected by inserting a plug of connecting cable into the plug-in socket. A device, prepared in such a way, is ready to operate.



Because during transport the device could be inclined by more than 30° from the vertical, wait about 3÷4 hours before connecting the device to the power supply system. Otherwise, the condensing unit can be damaged.

OPERATION

The temperature of chilled space and operating cycle of the refrigeration unit can vary. It depends on the ambient temperature, amounts of inserted fresh products and heat inflow from outside. Therefore it is necessary to avoid opening the door when unnecessary and inserting warm foodstuffs with temperatures that significantly exceed the storage temperatures. Otherwise, it can considerably increase the chilling time of products.

It is recommended to avoid a long contact of the skin with cold surfaces of the device or cold products. The protective clothing should be used in case of longer contact. The failure to use the protective clothing can cause torpidity or frostbite.

During operation of the device, observe the rule that the maximum load does not exceed the values specified in the table and the red symbol in the device chamber. The products should be arranged in such a manner to allow free air circulation in the upright refrigerator or freezer.



The first filling of the refrigerated space should be done after cooling it earlier to the operating temperature (the required time for the first cooling of the unloaded upright refrigerator or freezer to the set-up temperature: ~ 2h). This rule should be observed also after a longer break in operation.

From time to time it is recommended to stop the operation of the device to clean its interior, defrost naturally the evaporator unit, clean the condenser of the refrigeration unit and check the condition of the door seal. A face heated by electric heater protects the seal against freezing in the freezing devices.

Any replacement of the seal consists in removing the old seal and pushing the new one in the groove of the profile.

Before performing the afore-mentioned steps, it is necessary to switch off the device by means of a main switch and remove the plug of connecting cable from the plug-in socket.

The condenser of the refrigeration unit should be cleaned not rarely than every 4 weeks. It should be cleaned by means of a soft brush or vacuum cleaner.



Do not use a stream of water while cleaning the device. The producer does not assume responsibility for the damages of the condensing unit arisen as a result of not maintaining the condenser in a clean state!

The icing of the evaporator is removed automatically. The most frequent reason for the excessive icing of the evaporator is the failure to observe the procedure of the pre-cooling of a product before placing it in the freezing device.

All setups of the controller necessary for a normal function of the device are introduced by the producer.



It is strictly forbidden to intervene in the system parameters of the controller because it may cause very serious consequences, including damage of the goods and refrigerated device. In case of the breakdown the goods stored in the device should be protected against damage. Dora Metal does not assume responsibility for the goods damaged as a result of the breakdown of the device.

The devices are provided with an automatic condensate evaporation system. The condensate in the engine room is evaporated by means of electric heater.

TRANSPORT

The producer delivers the device in the crated, protected with cardboard angles and foil. During the transport the device should be protected against moving.

The device should be transported in an operation position. Upon receipt of the device (before unpacking) it is necessary to check if any damages did not arise during the transport. All noticed damages should be immediately notified to the forwarder. In no case, a damaged device can be returned to its producer, without notification, and without a written permit, received earlier from the producer.



The producer does not assume responsibility for the device that is damaged during the transport.

In order to avoid any damage the device should be unpacked by 2 persons at least.

DISPOSAL

Prior to the transport the device is protected by a packing crate which consists of the following recyclable elements: wooden planks, cardboards, propylene fastening tapes, polyethylene foil.

The elements of the device packaging should be kept out of reach of children.

After withdrawal of the device from service it cannot be mixed with other household waste. Before handing over the device to disposal it is necessary:

- to protect the device by disconnecting the power supply cable,
- to check the tightness of the refrigerated system.



The valid local regulations related to disposal and scrapping works should be observed.

TECHNICAL DATA**Table 1. Stainless steel upright refrigerators of DM-9212x and DM-9222x series**

Data		Catalogue number			
		DM-92121	DM-92125	DM-92224	DM-92122
Depth	mm	836			
Width	mm	744			
Height	mm	2065			
Number of doors	pcs	1			
Type of doors		Solid doors		Glass doors	
Capacity (gross)	litre	610			
Permissible loading	kg	150			
Surface of shelf	m ²	0,34			
Number of shelves	pcs	3			
Max. loading of shelf	kg	35			
Arrangeability of shelves	mm	spacing every 50mm			
Air circulation		Forced (fan) circulation			
Interior temperature	°C	-2...+10		+2...+10	
Power supply	V/Hz	230 / 50			
Power rating		Data specified on the rating plate			
Climatic class					
Type of refrigeration unit					
Type of refrigerant	-	R134a / R290			
Amount of refrigerant	kg	0,25 / 0,08			
GWP / ODP	-	for R134a=1430/0 , for R290=3/0			
Equivalent CO ₂	t	for R134a=0,36, for R290=not applicable			


Table 2. Stainless steel upright refrigerators of DM- 9213x series

Data		Catalogue number	
		DM-92131	DM-92132
Depth	mm	869	
Width	mm	714	
Height	mm	2065	
Number of doors	pcs	1	
Type of doors		Solid doors	Glass doors
Capacity (gross)	litre	520	
Permissible loading	kg	150	
Surface of shelf	m ²	0,34	
Number of levels	pcs	3	
Max. loading of shelf	kg	30	
Arrangeability of shelves	mm	spacing every 55mm	
Air circulation		Forced (fan) circulation	
Interior temperature	°C	-2...+10	+2...+10
Power supply	V/Hz	230 / 50	
Power rating		Data specified on the rating plate	
Climatic class			
Type of refrigeration unit			
Type of refrigerant	-	R134a / R290	
Amount of refrigerant	kg	0,25 / 0,08	
GWP / ODP	-	for R134a=1430/0 , for R290=3/0	
Equivalent CO ₂	t	for R134a=0,36, for R290=not applicable	

Table 3. Upright freezers of DM-9212x and DM-9213x series

Data		Catalogue number	
		DM-92127	DM-93137
Depth	mm	836	869
Width	mm	744	714
Height	mm	2065	
Number of doors	pcs	1	
Type of doors		Solid doors	
Capacity (gross)	litre	610	520
Permissible loading	kg	150	
Surface of shelf	m ²	0,34	
Number of shelves	pcs	3	
Max. loading of shelf	kg	35	30
Arrangeability of shelves	mm	50	55
Door switch		Yes + acoustic alarm	
Air circulation		Forced (fan) circulation	
Interior temperature	°C	-14...-22	
Power supply	V/Hz	230 / 50	
Power rating		Data specified on the rating plate	
Climatic class			
Type of refrigeration unit			
Type of refrigerant	-	R404A / R290	
Amount of refrigerant	kg	0,40 / 0,13	
GWP / ODP	-	for R134a=1430/0 , for R290=3/0	
Equivalent CO ₂	t	for R134a=0,57, for R290=not applicable	


WIRING DIAGRAM FOR PRODUCTS: DM-92121 (standard version), DM-92122 (standard version), DM-92125 (standard version), DM-92224 (standard version), DM-92131 (optional version), DM-92132 (optional version) – with LAE AT2-5BQ4E-AG(ST) traditional controller provided with buttons

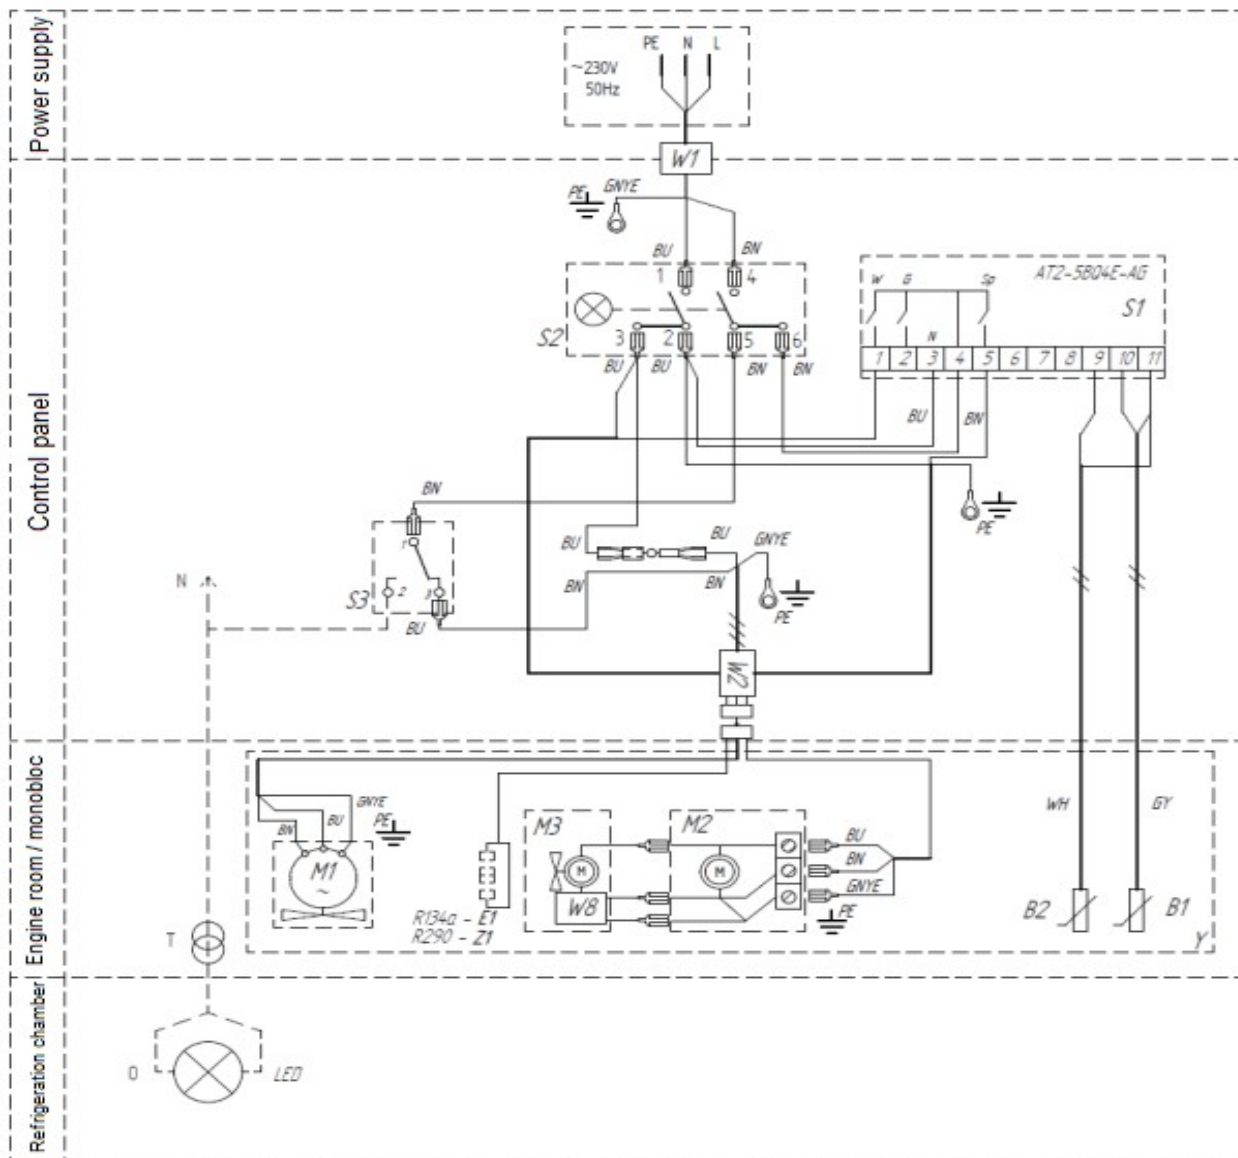

Z1	Solenoid valve
W1	Bunch 1
T	LED power supply unit - OPTION
O	LED lighting - OPTION
W2	Bunch 2
Y	Monobloc
S3	Door switch
S2	Rocker switch
S1	Controller
M3	Condenser fan
M2	Compressor
M1	Cooler fan
E1	Defreezing heater
B2	Evaporator temperature sensor
B1	Chamber temperature sensor

Explanation:


WIRING DIAGRAM FOR PRODUCTS: DM-92127 (standard version), DM-92137 (optional version) – with LAE AT2-5BQ4E-AG (ST) traditional controller provided with buttons

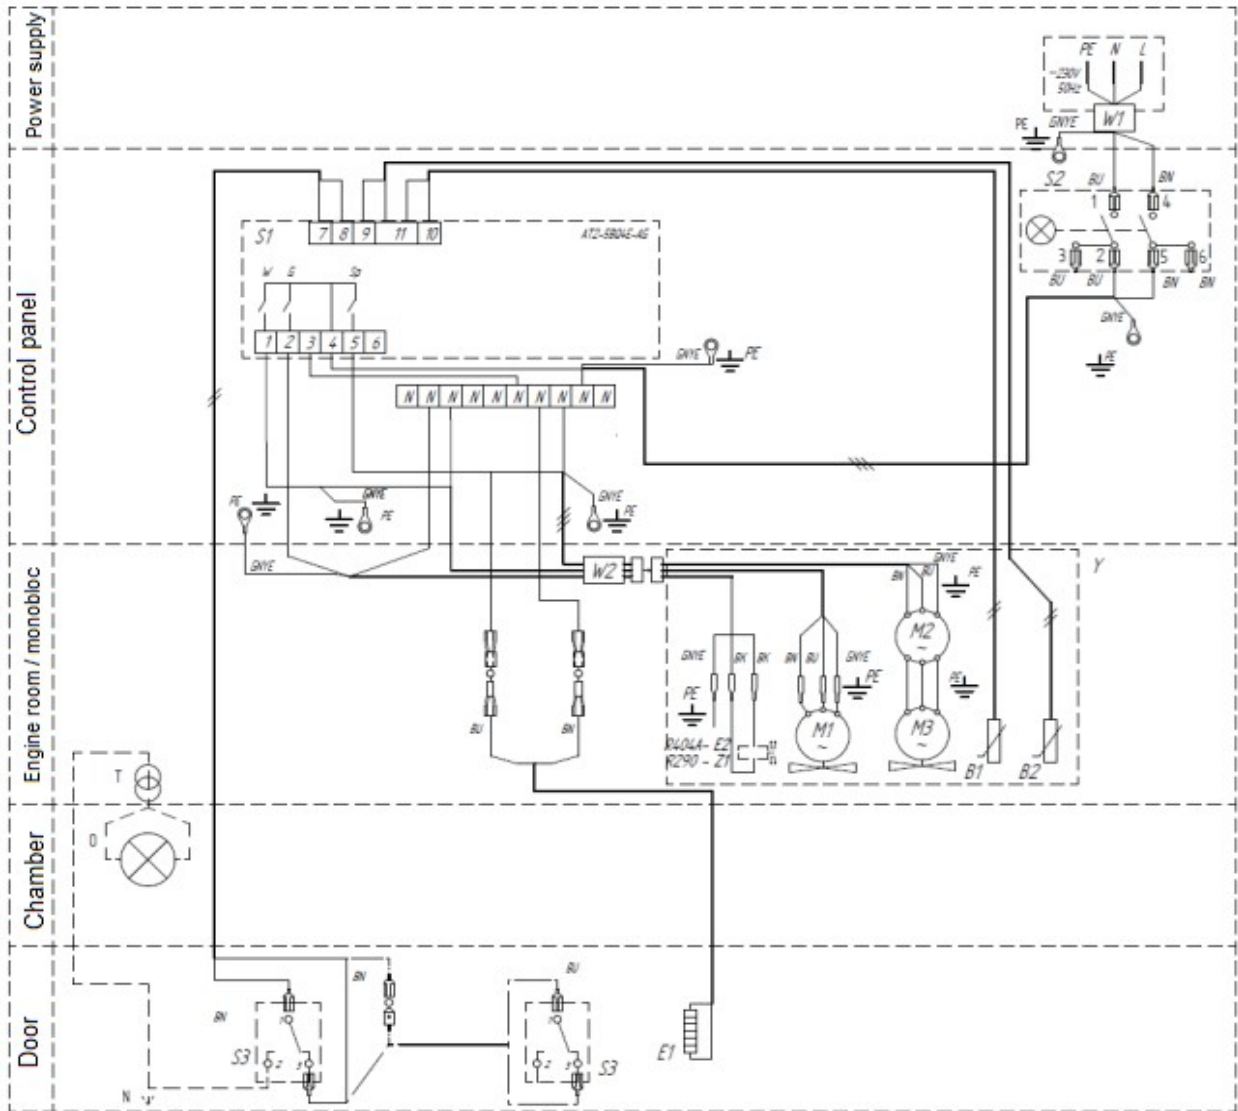

Z1	Solenoid valve
W1	Bunch 1
T	LED power supply unit
O	LED lighting
W 2	Bunch 2
Y	Monobloc
S3	Door switch
S2	Rocker switch
S1	Controller
M3	Condenser fan
M2	Compressor
M1	Cooler fan
E1	Defreezing heater
E2	Heating cable 50W 4.38
B2	Evaporator temperature sensor
B1	Chamber temperature sensor

Explanation


WIRING DIAGRAM FOR PRODUCTS: DM-92121 (optional version), DM-92122 (optional version), DM-92125 (optional version), DM-92224 (optional version), DM-92131 (standard version), DM-92132 (standard version) – BD1-28C1S5W-B actuator module + membrane panel with LCD (SM) display

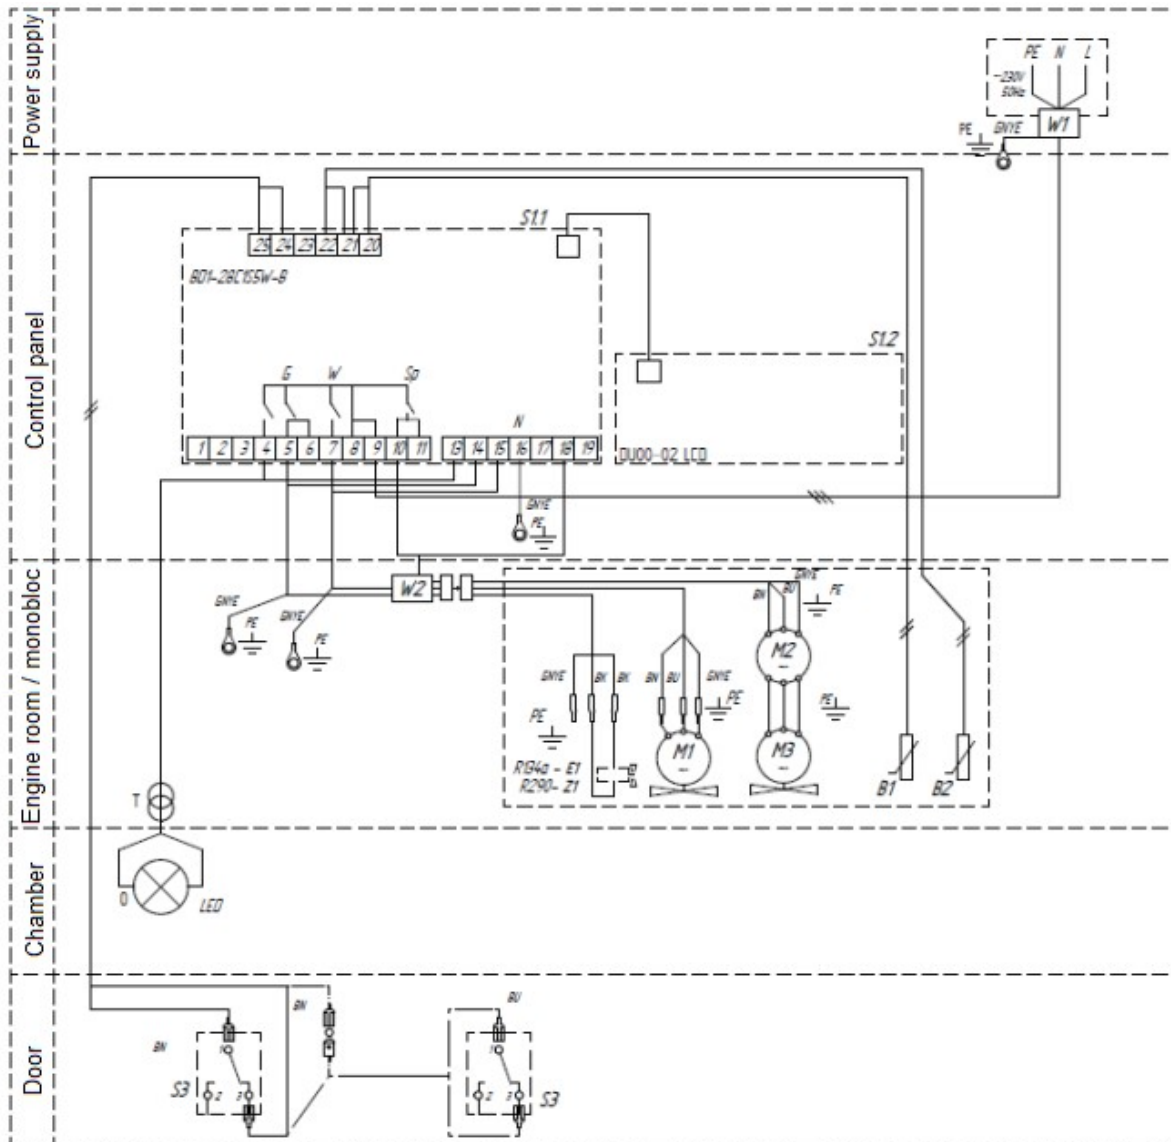

Explanation:

E1	Defreezing heater
Z1	Solenoid valve
W 1	Bunch 1
T	LED power supply unit
0	LED lighting
W2	Bunch 2 - SOCKET - CONTROLLER
Y	Monobloc
S3	Door switch
S12	LCD display
S11	Controller
M3	Condenser fan
M2	Compressor
M1	Cooler fan
B2	Evaporator temperature sensor
B1	Chamber temperature sensor

WIRING DIAGRAM FOR PRODUCTS: DM-92127 (optional version), DM-92137 (standard version) – BD1-28C1S5W-B actuator module + membrane panel with LCD (SM) display

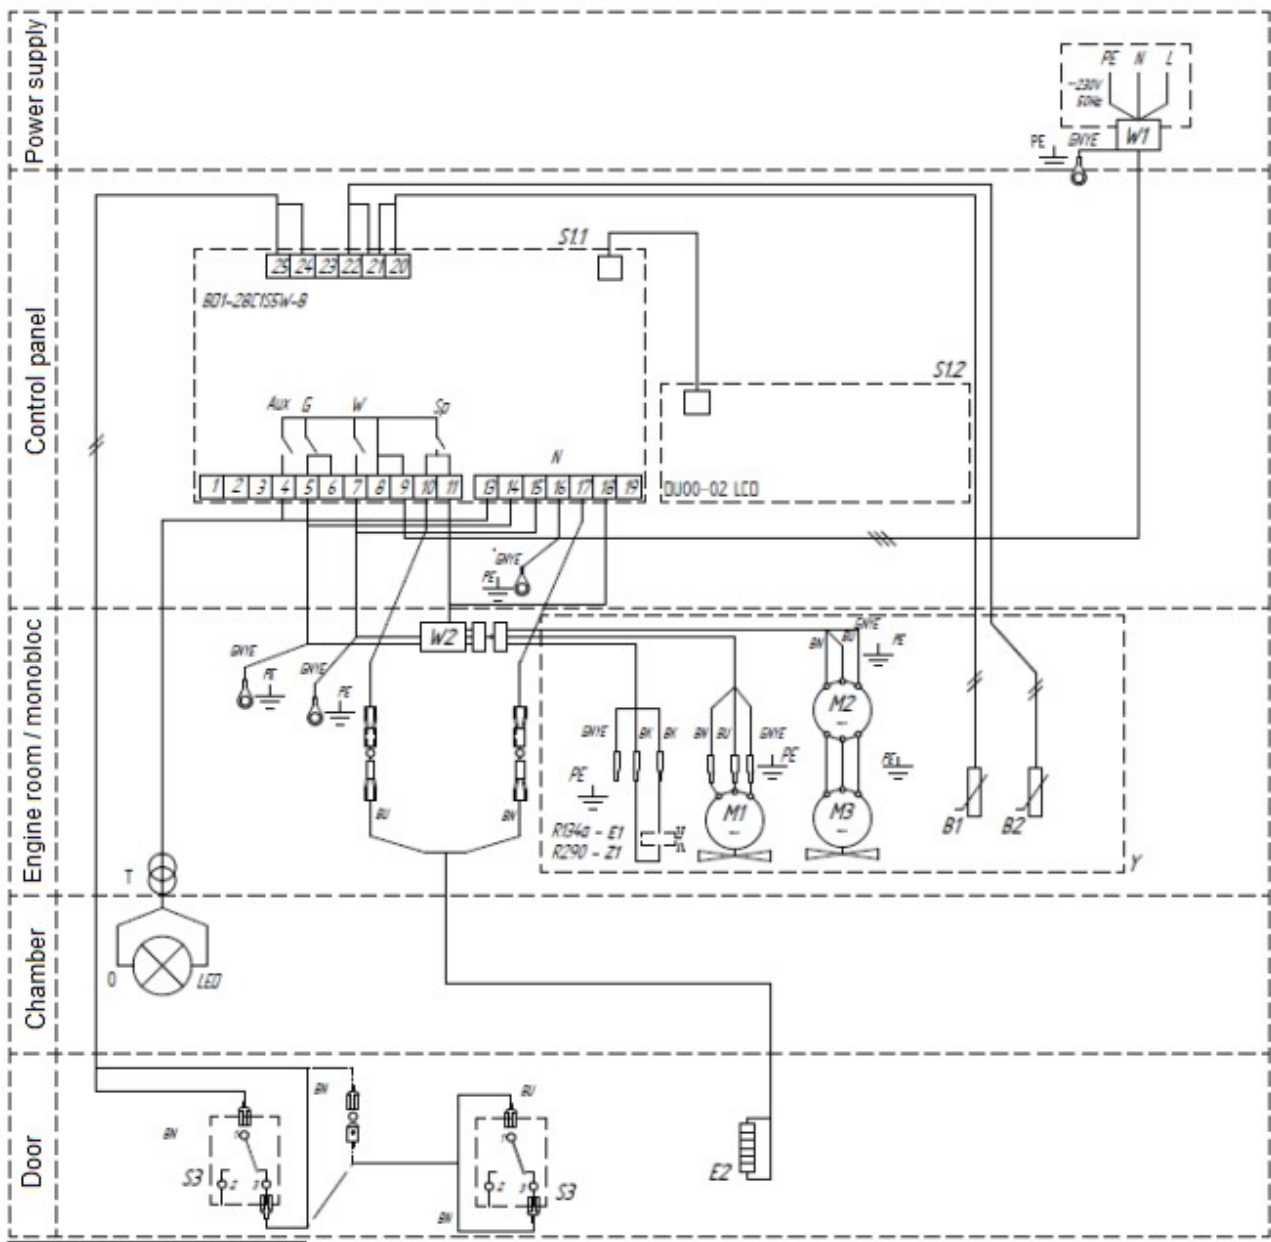


E1	Defreezing heater
Z1	Solenoid valve
W 1	Bunch 1
T	LED power supply unit
0	LED lighting
W2	Bunch 2 - SOCKET - CONTROLLER
Y	Monobloc
S3	Door switch
S12	LCD display
S11	Controller
M3	Condenser fan
M2	Compressor
M1	Cooler fan
E2	Heating cable
B2	Evaporator temperature sensor
B1	Chamber temperature sensor

Explanation:






LAE CONTROLLER WITH BUTTONS - SERVICE INSTRUCTION

Basic operation

The power supply is turned on by means of a rocker switch located on the control panel of the device or by pressing the button  of the controller. The switching condition is signalled by the values of the air temperature in the chamber appeared on the controller's display.


In order to display and modify the required temperature of the chamber:



- Press and hold the button  for half a second to display a current programmed temperature value.
- Press and hold the button  then:
- Press the button  to increase the temperature value.
- Press the button  to decrease the temperature value.
- After release of the button  the newly programmed value is stored. Since then the controller will start running a new programme.

▪ Defreezing (defrosting):

During operation of the device the message "dEF" appears on the display at regular intervals, this means that the device operates in the defreezing mode of the cooler. The defreezing cycle and its duration are determined by the producer of the device and user does not affect this parameter. If due to the difficult operating conditions of the device the additional defreezing of the cooler is needed, press and

hold the button  for 2 seconds. The message "dEF" will appear on the display. The defreezing process will stop automatically after reaching the time or temperature programmed by the producer.

▪ Alarms:

The meaning of messages that can appear on the display:

E1 - Chamber temperature sensor damaged. The controller will start the device in a time cycle according to the times programmed by the producer. Defreezing will function normally. Call the service in order to remove the defect.

E2 - Evaporator temperature sensor damaged. The controller will not run the automatic cycle and manual defreezing. In such a case the only possibility of defreezing the cooler is turn off the device and wait for the natural ice melting on the cooler. Call the service in order to remove the defect.

dEF - Defreezing cycle activated (see section: **Defreezing**)


REC - Evaporator drainage after defreezing process

CL - Warning: condenser must be cleaned

Note! Message CL

Clean the condenser, see: page 6 – section: Operation. After cleaning of the condenser follow the below instruction.

In order to turn off the alarm **CL** reminding that the condenser must be cleaned (every 4 weeks):

- press the button  until the display shows the message **CND**,


- then holding the button , press the button .

After these steps the parameter CND is zeroed and the cycle is set up to the beginning.


NOTE! Keypad lock

The most common mistake made by the users involves **locking the keypad unintentionally** resulting in lack of access to the controller menu. The non-verification of the locking option setup results in sending the controller back to the distributor as 'damaged'. The keypad lock allows avoiding the undesirable and potentially dangerous tampering if the controller is installed in an easily accessible place. In the menu INFO, set the parameter LOC=YES in order to turn on the keypad lock. **In order to resume the operation of the keypad, set the parameter LOC in the value NO.**

In order to unlock the keypad


- press the button  until the display shows the message **LOC**,

- then holding the button , press the button .

- in order to exit this menu, press the button  or wait 10 seconds.

Switching the device into the mode ECO


The operation of the device can be quickly changed into the mode ECO (switching the device into alternative setups). The mode ECO functions most effectively under proper operating conditions of the device (i.e. low door opening frequency, putting products pre-refrigerated or frozen to the chamber). Under such conditions the function ECO allows saving a part of energy in relation to the operation with the basic settings. In order to switch between the standard mode

and the mode ECO, press and hold the button  for 2 seconds. The activation of the mode ECO is signalled by the proper lamp lit on the controller screen.

LAE CONTROLLER WITH LCD DISPLAY AND MEMBRANE BUTTONS - SERVICE INSTRUCTION

LCD-DISPLAY DU00-02

Description of symbols:

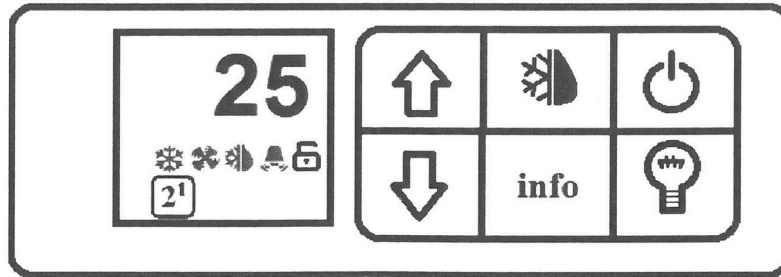

Description of diode indicators:

	LED indicators		Buttons
	Active thermostat relay (cooling is turned on)	info	Information/setup display button
	Active fan relay (fan is turned on)		Setup value decrease
	Active electric heater relay (defrosting is turned on)		Setup value increase
	Active 2. (alternative) set of operating parameters		On/off (stand-by) button
	Alarm		Manual start of 2. (alternative) set of operating parameters
	Locked keypad		Manual start of defrosting

Basic operation

The power supply is turned on by pressing and holding the button for 5 seconds on the control panel. The switching condition is signalled by a short acoustic signal and graphically - showing the current value of the air temperature in the chamber on the display LCD.

In order to display and modify the required temperature of the chamber:

- Press the button to increase the required temperature of the chamber.
- Press the button to decrease the required temperature of the chamber.
- After setting of the temperature press the button or wait for 5 seconds – then the required temperature is stored and the display returns to the current temperature in the upright refrigerator or freezer.

The power supply is turned off by pressing and holding the button for 5 seconds on the control panel.

Mode ECO

The advanced controller used in the device detects automatically the operating conditions of the mode ECO. When the proper conditions are detected the controller switches the device automatically in the mode ECO. Under such conditions the function ECO allows saving a part of energy in relation to the operation in the basic mode.

Note! Message CL

Clean the condenser. After cleaning follow the below instruction.


In order to turn off the alarm **CL** reminding that the condenser must be cleaned (every 4 weeks):

- press the button until the display shows the message **CND**,


- hold the buttons and at the same time.

After these steps the parameter CND is zeroed and the cycle is set up to the beginning.

RATING PLATE

	Data concerning the producer		Place for product designation
	Name and type of product		
Factory number/year of production	<input type="text"/>	Rated voltage	<input type="text"/>
Mass	<input type="text"/>	Current frequency	<input type="text"/>
Climatic class	<input type="text"/>	Rated current	<input type="text"/>
Type of refrigeration unit	<input type="text"/>	Max. lighting power	<input type="text"/>
Refrigerant	<input type="text"/>	Heating system power	<input type="text"/>
Refrigerant mass	<input type="text"/>	Temperature range	<input type="text"/>

F-GAS LABEL

UWAGA: ZAWIERA FLUOROWANE GAZY CIEPLARNIANE			
Urządzenie/produkt zawierający lub uzależniony od fluorowanych gazów cieplarnianych Zgodnie z (UE) nr 517/2014 i (UE) nr 2015/2068			
Czynnik chłodniczy:	patrz tabela	GWP / ODP:	patrz tabela
Ilość czynnika napełniona fabrycznie:	patrz tabela	Ekwiwalent CO₂:	patrz tabela
Ilość czynnika dodana:	___ kg	Ekwiwalent CO₂:	___ t
Łączna ilość czynnika w obiegu:	___ kg	Ekwiwalent CO₂:	___ t
Urządzenie hermetycznie zamknięte:	TAK		
Rodzaj zagrożenia: H280: Zawiera gaz pod ciśnieniem. Ogrzanie grozi wybuchem. H314: Może powodować oparzenia skóry oraz uszkodzenia oczu.			
Środki ostrożności: P273: Unikać uwolnienia do środowiska. P403: Przechowywać w dobrze wentylowanej przestrzeni. P502: Zawartość po odzyskaniu przekazać do Fundacji Ochrony Klimatu PROZON.			

NOTE: CONTAINS FLUORINATED GREENHOUSE GASES Appliance/product containing or dependent on fluorinated greenhouse gases According to (EU) No. 517/2014 and (EU) No. 2015/2068			
Refrigerant:	see table	GWP / ODP	see table
Amount of refrigerant filled in factory:	see table	Equivalent CO ₂ :	see table
Amount of refrigerant added:	kg	Equivalent CO ₂ :	t
Total amount of refrigerant in circulation:	kg	Equivalent CO ₂ :	t
Device hermetically sealed	YES		
Hazard statements H280: Contains gas under pressure; may explode if heated. H314: Causes severe skin burns and eye damage. Precautionary statements P273: Avoid release to the environment. P403: Store in a well ventilated place. P502: Dispose of contents to the Foundation for Climate Protection (PROZON)			

DORA METAL Sp. z o.o.

Chodzieska 27
64-700 Czarnków

Phone: +48 (067) 255 20 42

Fax: +48 (067) 255 25 15

<http://www.dora-metal.pl>

E-mail: info@dora-metal.pl
serwis@dora-metal.pl

service, mobile 602 286 179

Information included in this document may be changed by DORA METAL without prior notification of the user. Any part of this document may not be reproduced or disseminate in any form or by any means without written permit of DORA METAL

**Copyrights © 2017 by DORA METAL Sp. z o.o.
All rights reserved**